



GOCCOPRO DIGITAL MACHINE USE

ANY QUESTIONS PLEASE SEE A TEACHER BEFORE USING

Artwork

- Use Black & White, grey will print as shading
- Minimum 300dpi quality

BEFORE HITTING PRINT BUTTON ON COMPUTER

- Turn on machine and select frame size BEFORE PRINTING
- Check the Mesh grade in the machine

Printer Driver Properties

Original Size

- Select correct paper size for your artwork
- Use A4-R for A4 designs (this goes across the mesh and saves film)

ONLY tick 'Auto Screen Making' if you have turned on the machine and changed the frame size. Leave clear to press the green 'Start' button after sending the design to machine.

Screening Type (leave at Grain-touch)

- Grain-touch gives best quality for photos
- Screen-covered allows manual changes, however use PhotoShop screen effect for this setting and make changes on the computer not machine.

Photo adjustment, Line Art & Test Style

- Leave as default (only teachers to change these settings)

After Use

Ensure machine is turned off and place cover over top.

Error, Noises or Problems

This is an expensive machine – you MUST see a teacher before opening the cover.

L-01 (flashes - -46) Error: Design is too large for the frame size, or wrong frame size selected.

- Press orange 'All Reset' button (does not clear design), change frame size and press green 'Start' button.

