

Step 1 - Download and install the MiScreen-Air App on your tablet, device or phone.

Note: For Windows PC/ MAC OS desktop software visit www.MiScreen.com.au



... or visit your OS support site and search.





Step 2 - Connect to MiScreen-Air

1. Connect the LAN cable between the TP-LINK Access Point and Silex Device.
2. Connect the MiScreen USB into the Silex Server USB Left Side Port.
3. Plug in power to both the Access Point and Silex Device and turn both on.
- wait 30 seconds for both devices to boot.
4. Open your tablet/device/phone Wireless Network Settings and find network 'MiScreen-Air'.
- Connect to network 'MiScreen-Air', enter password 'miscreen' all lower case.

Step 3 - Pair the MiScreen-Air App to Silex Server


1. Open the MiScreen-Air App, and select icon to open 'Communication & Screen Making' options.
2. Select the Available MiScreen USB connection.
- Do not select NEHOC-SILEX connection.
- Available USB number may vary to image right.
3. Exit screen to previous menu, press 'Completed' and confirm Connected to: NEHOC-SILEX > MiScreen displayed.
- Machine details will be displayed.

Once pairing is completed, it is not required on startup or ongoing use. If a connection error occurs, repeat steps above to repair.

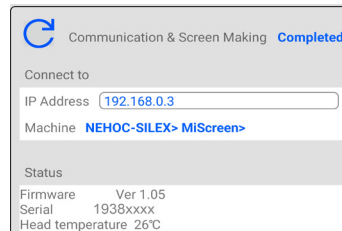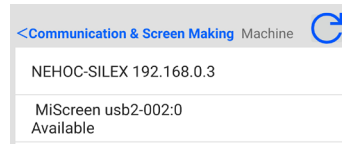

Help and Assistance

Open the Help Icon for in app support and usage details.

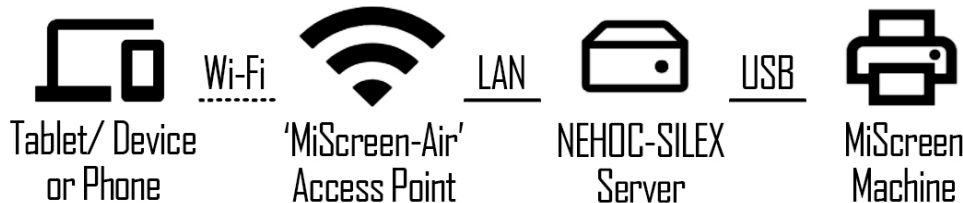

The MiScreen-Air App has several advantages over the PC/ MAC/ Desktop application software:

- ✓ Generate halftone images for finer detailed photographic prints.
- ✓ Add multiple designs to the work canvas, or tile/ repeat a single design.
- ✓ Overlay multiple images to create a new design.

Usage Icons



Tapping this button **Selects an Image** saved on the device in Photos and adds it to the work canvas. The canvas is the wide white area displayed on the main screen.




Help Screen is displayed. Open this screen for a detailed description of menu's and usage of the app icons.



Communication & Screen Making. Used to initially pair App and SILEX device. Used to confirm the status of the machine and transfer images.



Allocation & Adjustment enables real time changes to settings and adjust images in the canvas area e.g. Brightness, Halftones, Image Position & Size, Tiled Imaged, etc.

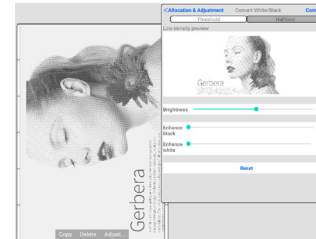

Usage in the Canvas Area



- Tapping Item displays the menu to carry out copying & deleting.



- Pinch a selected item with two fingers to drag or resize.



- When you overlay images, white areas become transparent.



- Drag a selected Item to move it.



- A selected item can be rotated using two fingers.



- Tapping the name of the canvas in the lowest part can change the canvas.

IMPOTANT NOTICE ON HARDWARE SETTINGS

MiScreen-Air Access Point and Silex device have been modified from original factory settings and paired. The original settings are located in the labeled documentation package.

If either Access point or SILEX device is reset to factory settings the MiScreen-Air setup information will not reflect correct operation. Contact miscreen@goccopro.com.au before any factory reset occurs.

This Guide is produced by NEHOC Australia Pty Ltd and is intended to be used as a guide only. NEHOC may not be held responsible for any fault or misinterpretation that may occur from its use by the customer. Specifications and/ or contents correct at time of publication. Information is subject to change without notice. All rights reserved.